

# YouBot Project

Inspection, Development and Deployment of the KUKA YouBot  
Mobile Base

**Author:** Aditya Agrawal

**Advisor:** assistant professor Tomasz Kucner

**Supervisor:** senior university lecturer Salu Ylirisku

ELEC-C0302 Final Project in Digital Systems and Design  
Aalto University

June 4, 2025

# Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
1.1	Motivation . . . . .	1
1.2	Project Overview . . . . .	1
<b>2</b>	<b>Initial state of YouBot</b>	<b>2</b>
2.1	Onboard Computer . . . . .	2
2.2	Connection Interfaces . . . . .	3
2.3	Power . . . . .	3
2.4	Sensors . . . . .	4
2.5	Additional Hardware Components . . . . .	5
2.6	Documentation . . . . .	6
2.7	Initial Project Goals . . . . .	6
<b>3</b>	<b>Project Overview</b>	<b>8</b>
3.1	Technical Goals . . . . .	8
3.2	Learning Objectives . . . . .	8
3.3	System Architecture . . . . .	8
<b>4</b>	<b>System Development</b>	<b>10</b>
4.1	Booting up the YouBot . . . . .	10
4.2	ROS1-ROS2 Bridge . . . . .	11
4.3	Sensors . . . . .	11
4.4	Battery Replacement . . . . .	11
<b>5</b>	<b>Experimental Setup for Movement and Odometry</b>	<b>14</b>
5.1	Motivation and Approach . . . . .	14
5.2	Experiment Design . . . . .	14
5.3	Results and Error Analysis . . . . .	17
<b>6</b>	<b>Future Applications</b>	<b>19</b>
6.1	Potential Use Cases for the YouBot Mobile Base . . . . .	19
6.2	Teach and Repeat (T&R) in Context . . . . .	20
6.3	Speculative and Emerging Applications . . . . .	20
6.4	Summary Table: Potential Use Cases for the KUKA YouBot Mobile Base . . . . .	20
6.5	Conclusion . . . . .	20
<b>7</b>	<b>Reflection</b>	<b>22</b>
7.1	Project Evolution . . . . .	22
7.2	AGILE . . . . .	22
7.3	Final Thoughts . . . . .	22
<b>A</b>	<b>User Manual for the KUKA YouBot</b>	<b>24</b>
A.1	Booting Up the YouBot . . . . .	24
A.2	Initial Configuration . . . . .	24
A.3	Running C++ demos . . . . .	26
A.4	Running the ROS Interface . . . . .	27
A.5	Writing Custom Programs . . . . .	28

<b>B</b>	<b>Code files</b>	<b>30</b>
<b>C</b>	<b>Experimental Data</b>	<b>43</b>
C.1	Linear movement experiment . . . . .	43
C.2	Rotational movement experiment . . . . .	45

# 1 Introduction

## 1.1 Motivation

Section 1 done. draft #1

In the rapidly evolving field of robotics, expensive hardware platforms often become obsolete quickly. This is not because of physical wear and tear or a lack of functionality, but rather due to quick advancements in software and infrastructure. For example, artificial intelligence and machine learning have made significant strides in recent years, leading to the development of humanoid robots with advanced capabilities. As a result, older platforms become less relevant and lack the necessary support for extending their potential lifespan, despite inherent capabilities.

The KUKA YouBot is a prime example of this phenomenon. It was once a popular platform for research and education in robotics in the mid-2010s, but has been since discontinued and is no longer supported by the manufacturer. This mobile robot base is quite robust, compact and utilizes open-source drivers. It can potentially serve a variety of purposes, including autonomous navigation, perception and human-robot interaction with modern tools and sensors. Instead of discarding such platforms, we should explore these avenues to extend their lifespan and utility.

Thus, this project aims to explore the potential of deploying and repurposing legacy robotic hardware like the KUKA YouBot within the current landscape of robotics. By doing so, we can demonstrate the potential of long-term viability of older platforms whilst allowing for smooth integration with other systems.

## 1.2 Project Overview

This project aims to document the reployment and quantitative measurement of the KUKA YouBot's capabilities, particularly in terms of navigation and odometry.

Section 2 provides an overview of the initial state of the YouBot, including its hardware and software components, as well as a brief description of the initial goals of the project. Section 3 outlines the technical and learning objectives of the project. Section 4 describes the system development process, including network configuration, battery and sensor deployment, and custom program development. This follows into section 5, which details an experimental setup for testing movement and odometry. Section 6 discusses future potential for the YouBot for long-term research and industrial use cases, and section 7 concludes the report with a personal reflection on the project and its outcomes. The appendix includes a user manual for the YouBot, as well as relevant code files and experiment data.

## 2 Initial state of YouBot

Section 2 done. draft #1

The YouBot is a mobile robotic platform developed by German automation company KUKA. First introduced in the early 2010s [cite], it was primarily designed for research and educational purposes in the field of mobile robotics. To further this purpose, a significant portion of software used on the YouBot is open-source and available on GitHub [cite].

The YouBot typically consists of two main parts: a mobile base and a robotic arm. The mobile base is equipped with four omnidirectional mecanum wheels and motors for movement, alongside an onboard computer for processing and control. This onboard computer runs Ubuntu and ROS1, with conveniently provided drivers and wrappers, allowing for smooth software integration. The robotic arm has 5 degrees of freedom (DOF) and a two-finger gripper [cite], enabling it to perform a variety of tasks through the onboard computer. Since this project involves only the mobile base, we will not be discussing the arm in detail.

The YouBot's open-source software stack and ROS compatibility provide a versatile foundation for both low-level hardware interfacing and high-level algorithm development. This robot and the attached sensor modules are thus particularly well-suited for research within mobile robotics, particularly those pertaining to navigation, perception and human-robot interaction.



(a) The robot with the robotic arm attached. [cite]



(b) The robot as used in the Aalto University Robotics Lab.

Figure 1. The YouBot.

### 2.1 Onboard Computer

The onboard computer features a Intel Atom D510 @ 1.66GHz processor, with a 2GB DDR2 RAM and 32GB SSD hard drive.

The computer currently runs Ubuntu 12.04.5 LTS with ROS Hydro, which is a decade-old version of the operating system and the robot operating system. Given the age of the OS and ROS, compatibility with modern libraries and software is limited. Essential drivers and wrappers were also available to enable communication with the robot's motors and sensors. These could be accessed directly through C++ programs or through ROS packages. For the purposes of this project, we have elected to focus on the latter to allow for a seamless

integration with the ROS ecosystem in the future, alongside a level of standardization and ease of use.

## 2.2 Connection Interfaces

To interface with the onboard PC, the YouBot features panels with several connection ports. The top panel of the robot contains two EtherCAT ports for consistent real-time communication with motion-oriented systems (i.e. robotic manipulators), and a standard Ethernet port for wired interfacing with an external computer or network. Adjacent to these communication ports are a power button and a small screen that displays input voltage and ON/OFF state of the onboard PC and motors (Figure 2b). Furthermore, the right side of the robot features a panel with a VGA port for video output, as well as six USB 2.0 ports for connecting peripherals such as a keyboard, mouse, or wireless adapter (Figure 2a).



(a) The right side of the robot, showing the VGA and USB ports.



(b) The onboard computer screen, alongside the power button and EtherCAT/Ethernet ports.

Figure 2. Connection points on the YouBot.

## 2.3 Power

The YouBot is powered by a 24V power supply, which can be connected through a 3-pin XLR connector located on the top panel of the robot. Additionally, the base includes two 24V 3-pin XLR output ports, which are intended for powering external components such as robotic manipulators or sensors (Figure 3a).



(a) The power input and output ports.



(b) The 24V power adapter used to power the YouBot.

Figure 3. Power supply components for the YouBot.

However, continuously powering the YouBot through a wall connection is not ideal for the goal of mobile robotics. Thus, the YouBot was also originally equipped with a sealed lead-acid (SLA) battery (Figure 4a). This battery had a capacity of 5Ah and provided an approximate runtime of 90 minutes. This battery furthermore connects to the robot via a 4-pin XLR connector, and is located in a dedicated slot on the left side of the robot (Figure 4b).



(a) The original SLA battery.

(b) The left side of the robot, showing the battery in its holder.

Figure 4. Power supply connection points of the YouBot.

Upon receiving the robot, four SLA batteries were available: three of them were the original units supplied with the YouBot, and the fourth was a makeshift replacement assembled by the lab engineer, Vesa Korhonen, in 2019. Unfortunately, none of these batteries were functional. The original units had degraded beyond usability, and the makeshift battery had similarly deteriorated over time.

As a result, the robot could not operate on battery power in its current state and required a constant wired connection to a wall outlet—an obvious limitation for a mobile robotics platform. A battery replacement would be ideal to restore the robot’s potential mobility.

## 2.4 Sensors

Alongside the robot base and various hardware components, the YouBot was also equipped with a variety of sensors to enhance perception and navigation. These included a Kinect v1 camera and two Hokuyo URG-04LX laser rangefinders.

### 2.4.1 Kinect

The Kinect v1 camera is a depth and RGB camera that was originally designed and sold in tandem with the XBOX 360 to support motion tracking and gaming. Due to its low cost, high availability and ease of use, it had indirectly become a popular choice in the robotics community for perception tasks.

Access to the Kinect’s sensor data can be achieved through the use of open-source software such as libfreenect [cite]. The retrieved data can then be processed using computer vision libraries such as OpenCV to enable the autonomous navigation as previously described.



Figure 5. The Kinect v1 camera module.

#### 2.4.2 Hokuyo URG-04LX Laser Rangefinder

The Hokuyo URG-04LX is a lightweight 2D laser rangefinder that is commonly used in robotics research. It provides high-resolution distance measurements in a 240-degree field of view and can detect objects up to 4 meters away with an accuracy of  $\pm 10$  mm. It communicates with the onboard computer using a serial interface, enabling straightforward integration into existing systems for mapping, localization, and obstacle avoidance tasks.



Figure 6. The Hokuyo URG-04LX laser rangefinder.

### 2.5 Additional Hardware Components

The YouBot also came with a variety of additional components and accessories to assist with sensor mounting and operation. These included a variety of nuts, bolts, and screws, as well as a hex key and several horizontal and vertical pillars. These pillars can be combined in a variety of ways to create a stable and secure mounting platform for the sensors.

A key component provided was a pre-attached sensor and mounting plate on the top panel (see Figure 1b), designed to allow for the convenient attachment of various sensors and accessories [cite <https://web.archive.org/web/20160613151621/http://www.youbot-store.com/accessories/mounting-and-sensor-plate>]. A wireless adapter was also included, which can be used to connect to the internet wirelessly. Additionally, a separate box contained various miscellaneous items, including previously used batteries, panels for the Youbot and controllers; which could prove potentially useful for customization or repair.



(a) Various pillars, nuts and bolts amongst other components.  
(b) The box containing previously used batteries and miscellaneous components.

Figure 7. Additional hardware components supplemented with the YouBot.

## 2.6 Documentation

The documentation for the KUKA YouBot is sparse. Since the product's discontinuation in the mid-2010s, KUKA has removed most references to the product from their official website, and the official website for the YouBot ([youbot-store.com](http://youbot-store.com)) is no longer active. The only starting point for official documentation was through a user manual dated 2013 found on the onboard PC.

Fortunately, as the YouBot was marketed as an open-source platform, many of its drivers and software components remain available on the YouBot GitHub repositories [\[cite\]](#). Furthermore, we leveraged the Wayback Machine [\[cite\]](#) to retrieve snapshots of the original website. While this archive is incomplete and tedious to comb through, they provide valuable insights into the hardware specifications, software stack, and applications of the YouBot during its active development period. Some notable websites include [janpaulus.github.io](https://janpaulus.github.io), which provides a comprehensive overview of the YouBot's hardware and software components, and the YouBot Wiki, which contains limited information on setting up the YouBot.

[add images of some of the more interesting websites here, and some of the images regarding the youbot's specifications.](#)

## 2.7 Initial Project Goals

Considering the hardware and software components of the YouBot, the initial goals of this project involved a comprehensive revival of the robot and the enabling of autonomous navigation using the Kinect camera. This would showcase the potential of the YouBot in cutting-edge research despite its age.

The Teach & Repeat (T&R) method was considered to be an ideal candidate to allow for autonomous navigation. This[\[cite\]](#) is a two-phase robotic navigation method where a robot is first "taught" a path via human guidance or pre-recorded data. The sensor data captured during this phase can then be used to allow the robot to autonomously "repeat" the path later on, even in different environments.

T&R only requires a single camera for a basic implementation. It is a relatively simple method to implement through the use of open-source software and libraries, such as OpenCV and ROS. Furthermore, it is robust to changes in the environment and can

dynamically correct errors through the use of visual odometry. As such, it has been a very popular research topic within the field of robotics, particularly in the context of mobile robots [cite]. Much of the work done on extending T&R aims to improve this robustness and scalability for a variety of sensors and use-cases.

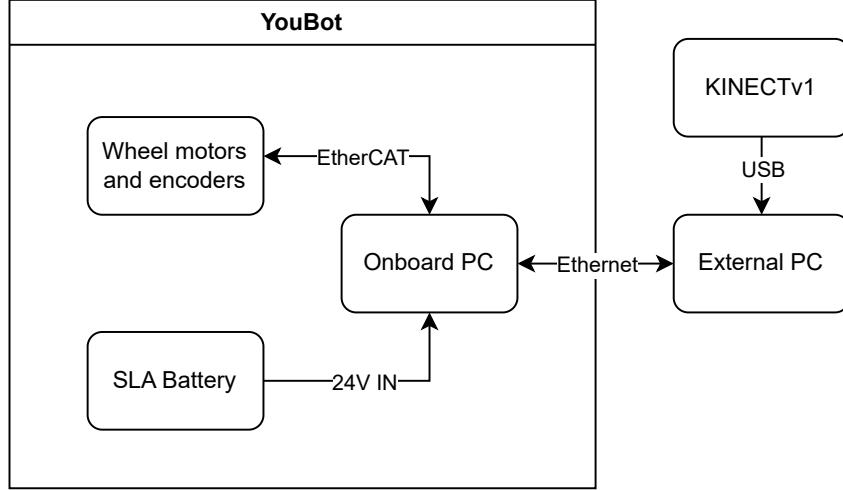


Figure 8. System Diagram

Figure 8 shows the proposed system architecture for this implementation. This would involve the onboard PC running ROS 1 Hydro, which would handle the low-level control tasks regarding motor actuation. The navigation and perception tasks would be handled by a more capable external computer running ROS 2 Jazzy. The two systems would then communicate through a ROS1-ROS2 bridge, enabling compatibility between legacy software on the YouBot and the more modern ROS2 stack. The Kinect camera would be then mounted on top of the YouBot, and would be connected to the external computer via USB. This setup allows for the YouBot to be used without much modification or strain to its legacy hardware, while still enabling the use of modern software and sensors.

However, due to several challenges—namely the age of the YouBot, limited prior experience with robotics, and software incompatibilities—this plan proved infeasible. A revised set of project goals was subsequently developed, as discussed in the following section.

## 3 Project Overview

### 3.1 Technical Goals

The technical goals for this project involve the deployment and quantification of the robot's capabilities, particularly in terms of navigation and odometry. This would involve the following goals:

- Inspecting the initial physical state of the YouBot
- Enabling the robot start up
- Enabling the running of the original demos
- Enabling the running of the ROS interface
- Enabling the ROS1-ROS2 bridge
- Enabling wireless connections to external computers using SSH and Ethernet
- Writing custom programs to control the YouBot
- Testing the movement and odometry of the YouBot
- Measuring the quality of movement and odometry by measuring their error
- Replacing the current deprecated batteries with a usable battery
- Documenting the revival process and potential future applications of the YouBot

The set of goals that have been formulated have deviated from the original goals, which were formulated based on experimenting and identifying the limitations of the robot.

### 3.2 Learning Objectives

In parallel with technical outcomes, this project required gaining a range of practical and theoretical competencies in robotics. These learning objectives included:

- Gaining hands-on experience restoring and operating a legacy robotic platform (KUKA YouBot)
- Building proficiency in Linux environments relevant to robotics development
- Writing Bash scripts to automate system setup, compilation, and deployment workflows
- Understanding the architecture and functionality of both ROS1 and ROS2, including their integration
- Establishing and managing secure connections between host and robot using SSH and Ethernet
- Creating and deploying custom ROS nodes for low-level motion control
- Studying robot navigation and odometry principles, including error sources and correction strategies
- Developing skills for documenting restoration efforts and formulating directions for future work

### 3.3 System Architecture

Our current system architecture is starkly different from the initial goal. While the YouBot itself remains unchanged, the external computer only serves the purpose of SSH access and remote control into the onboard computer. SSH could be conveniently done through a wireless connection, or through a more reliable Ethernet connection. The onboard computer runs ROS1 Hydro and communicates with the wheel motors and encoders

through EtherCAT. No external sensors will be used, highlighting our focus on enabling the YouBot's existing capabilities rather than extending them.

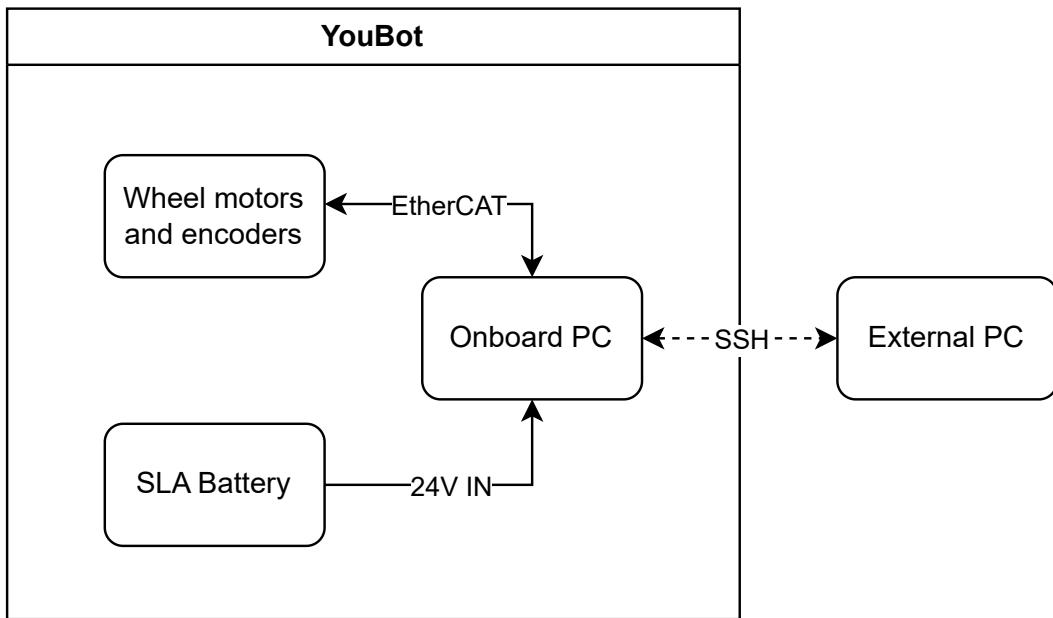


Figure 9. New System Diagram

## 4 System Development

### 4.1 Booting up the YouBot


After conducting the initial inspection as described in section 2, the next step was to boot up the YouBot. Since the onboard battery was completely dead, the YouBot was connected to an external 24V supply. On long pressing the power button, the screen flashed on and I could see the voltage input for the robot, alongside options to turn the PC and motors on/off separately.

Using a VGA monitor and USB peripherals, the onboard PC was accessed. It booted successfully and functioned like a standard Linux desktop. The wireless adapter was also operational and could connect to the internet. However, remote access via SSH was initially unavailable due to the absence of a static IP configuration.

Upon further inspection, several YouBot-specific software packages were also found installed on the onboard computer. These packages include the `youbot_driver`, which provides the necessary drivers to communicate with the robot's motors through EtherCAT, and the `youbot_ros_pkg`, which provides a complete ROS stack for the YouBot. These packages are essential for enabling the YouBot to communicate with ROS and to control its motors and sensors. Alternatively, a simpler ROS interface can be used through the `youbot_driver_ros_interface` package, which provides a minimal set of ROS nodes to control the YouBot. This package has been used for the purposes of this project to simplify the interaction with the robot. Additionally, the `youbot_description` package provides the necessary URDF files to describe the robot's kinematics and dynamics, allowing for simulation and visualization in RViz and Gazebo. Finally, the `youbot_applications` package provides a set of example applications and demos to get started with the YouBot.



(a) The onboard computer booting up.

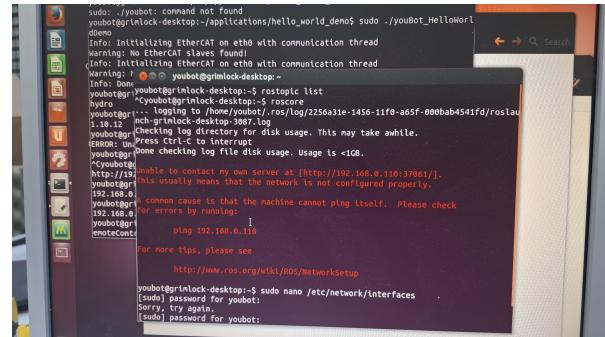

```
Sudo: ./youbot: command not found
youbot@rilmock-desktop:~$ sudo ./youbot_HelloWorld
dmesg
[INFO] Initializing EtherCAT on eth0 with communication thread
[WARN] No EtherCAT slaves found!
[INFO] Initializing EtherCAT on eth0 with communication thread
[WARN] ! ○ ○ ○ youbot@rilmock-desktop:-
[INFO] Done
youbot@rilmock-desktop:~$ rostopic list
hydro
youbot@rilmock-desktop:~$ roscore
youbot@rilmock-desktop:~$ roslaunch youbot_gazebo youbot_gazebo.launch
[INFO] [roslaunch]: Checking log directory for disk usage. This may take awhile.
[ERROR]: [roslaunch]: Press Ctrl-C to interrupt
youbot@rilmock-desktop:~$ roslaunch youbot_gazebo youbot_gazebo.launch
[INFO] [roslaunch]: unable to contact my own server at [http://192.168.0.110:37061/].
[INFO] [roslaunch]: this usually means that the network is not configured properly.
[INFO] [roslaunch]: common cause is that the machine cannot ping itself. Please check
[INFO] [roslaunch]: for errors by running:
ping 192.168.0.110
[INFO] [roslaunch]: for more tips, please see
http://www.ros.org/wiki/ROS/NetworkSetup
youbot@rilmock-desktop:~$ sudo nano /etc/network/interfaces
[sudo] password for youbot:
[sudo] password for youbot:
[sudo] password for youbot:
```

(b) The initial attempt at booting up the ROS interface.

Figure 10. Initial attempts at booting up the YouBot.

The ROS interface as well as the relevant demo programs were attempted to be run upon startup without prior configuration. The C++ demo programs were unable to detect any devices on the eth0 port, which was not the port the motors were using. The ROS interface was also unable to ping itself and start `roscore`. This was due to the onboard computer not being bound to the correct static IP address, which is necessary for the ROS interface to function properly.

Furthermore, the onboard computer did not have a static IP address, which meant that it

could not be accessed through Ethernet. This would prevent Ethernet-based communication with the YouBot, which would be more reliable than wireless communication.

## 4.2 ROS1-ROS2 Bridge

One of the first tasks I decided to embark on after getting the robot up and running was to set up the ROS1-ROS2 bridge. This was the most important link within the system, as it would allow the robot to seamless access the ROS2 navigation stack and enable it to access the computational resources of a more recent computer. However, the version of ROS1 on the robot is Hydro, which is more than a decade old and predates ROS2 development, i.e. it is not compatible with a ROS1-ROS2 bridge.

There are thus a handful of options to consider: One would be to upgrade the ROS1 version of the robot to a version that supports the bridge, such as Melodic or Noetic. However, this would require a significant amount of work and may cause compatibility issues with the outdated software on the robot. Another option would be to use a different computer with a more recent version of ROS1 and use it as a middleware between the robot and the ROS2 navigation stack. This would allow for a more seamless integration of the two systems, but would require additional hardware and software setup and create an unneccesarily complex system.

## 4.3 Sensors

### 4.3.1 Kinect Camera and libfreenect

The Kinectv1 camera is a depth and RGB camera that was originall designed and sold in tandem with the XBOX 360 to enable motion tracking and gaming. Due to its low cost, high availability and ease of use, it has indirectly become a popular choice for robotics research as well.

We can use open-source software such as libfreenect to access the data from the various sensors on the module.

discuss the libfreenect library, how to install it, and how it could be used within ROS.

### 4.3.2 Hokuyo URG-04LX Laser Rangefinder

The Hokuyo URG-04LX is a 2D laser rangefinder that is commonly used in robotics research. It is a compact and lightweight sensor that provides high-resolution distance measurements in a 240-degree field of view. The URG-04LX is capable of measuring distances up to 4 meters with an accuracy of +/- 10 mm. It communicates with the onboard computer using a serial interface, making it easy to integrate into existing systems.

discuss installing the drivers and whatnot, and how to use it within ROS and rqt.

## 4.4 Battery Replacement

draft 1, 11.05 12pm

Here are some good web pages about the Slealed Lead Acid (SLA) batteries: <https://batterymasters.co.uk/> <https://www.power-sonic.com/blog/how-to-charge-a-lead-acid-battery/> and <https://www.powerstream.co>

As previously mentioned, the YouBot came with three 24V SLA batteries. Two of these were the original batteries included with the YouBot, and one was a makeshift battery put together by Vesa in 2019. All three batteries were unusable. This section thus documents the technology behind the SLA batteries, the testing of the original batteries, replacing and testing a new battery, and future battery options.

#### 4.4.1 SLA Battery Overview

Sealed lead-acid (SLA) batteries operate based on a reversible chemical reaction between lead plates, lead dioxide and sulfuric acid electrolyte. When the battery discharges, the substances react to form lead sulfate and water, releasing electrical energy. During charging, this reaction is reversed.

These batteries are quite simple, robust, inexpensive and safe to use, indicating the reason for use in this scenario. However, they require some maintenance, and should undergo full discharge and charge cycles regularly to keep them in a good state. If they are not used regularly, they can suffer from sulphation, where lead sulfate crystals gradually form on the plates of the battery. This process is irreversible and permanently impairs the battery's capabilities. Cheaper SLA batteries are more prone to this issue due to lower quality materials, and one may only expect a maximum lifespan of 3-5 years from them.

SLA batteries are furthermore sealed and contain one-way valves to prevent internal pressure buildup due to production of hydrogen and oxygen gas. Normally these gases recombine back into water, but overcharging can force gas release, leading in gradual water loss.

The recommended voltage for charging SLA batteries is 2.3 volts per cell (2V), or 13.8V for a 6-cell (12V) battery, or 27.6V for a 12-cell (24V) battery. Charging at a lower voltage (i.e. 2V per cell) will not fill up the battery completely, and increase the risk of sulphation, since the lead sulfate crystals will not be fully converted back into active materials.

#### 4.4.2 Testing original batteries

To confirm the degradation of the original batteries, we decided to test them using a multimeter. The two original batteries were completely dead, and did not show any voltage when connected to the multimeter. The makeshift battery showed some voltage, but it was far too low to be usable out the gate. This battery was put together using two 12V SLA batteries, where each battery was individually connected to the 4-pin XLR connector. The YouBot internally connects them in series to create a 24V battery.

Vesa attempted to revive this battery through desulphation, where a higher-than-recommended voltage (in this case, 30V) is applied to the battery to force current through the hardened sulphate layers and dissolve them.

This seemed initially promising; the battery was accepting a charge and its voltage was increasing. However, this was only temporary, as the battery quickly lost voltage again after charging, suggesting that the sulphation was very severe. While some surface conductivity was perhaps restored, the effective area of the electrode plates was still very small, resulting in a very low capacity. As such, the battery was not usable for our purposes.

#### 4.4.3 Replacing batteries

maybe here we can link to the specific batteries used? the dimensions would be neat as well...

We decided to remake the makeshift battery using two new 12V SLA batteries of the same dimensions. While the previous batteries were Bitelma batteries, we bought some from Leader this time. These batteries were 12V 5.4Ah batteries. We tested them using a multimeter and used a car charger to charge them overnight.

The old batteries were removed from their casing and all relevant connections and pieces to structure the battery were removed. The new batteries were then appropriately connected to the 4-pin XLR connector [maybe mention the pinout here?](#), and the structural pieces were reattached with tape. After putting the casing back on, we were able to connect the new battery to the YouBot and power it on. The YouBot detects the two batteries and shows their individual voltages, confirming that the battery works. While it's not hermetically sealed, it works well for the purposes of this project.

#### 4.4.4 Future Battery Options

While we have replaced the SLA batteries with a makeshift one at a rather inexpensive cost, these batteries will not last long and will be prone to the same issues as the original batteries.

An ideal candidate for a replacement battery technology would be lithium-iron-phosphate (LiFePO<sub>4</sub>) batteries. These batteries are more expensive, but have multiple advantages over SLA batteries. They have longer lifespans, higher energy density, lighter weight, and are less prone to degradation. However, they would also need an integrated battery management system (BMS) to ensure safe operation, and potentially some custom hardware to fit the dimensions of the YouBot's battery compartment.

## 5 Experimental Setup for Movement and Odometry

There were various inconsistencies that occurred during the running of custom programs. For example, the square movement program consistently overshot the expected position with a positive drift in x, y, and yaw. To formally quantify these irregularities, a controlled set of experiments was conducted to assess error rates between actual movement and odometry measurement.

### 5.1 Motivation and Approach

The experimental effort was designed to:

- Quantify the error between commanded and actual movement.
- Identify whether errors were consistent (systematic), random, or scale-dependent.
- Assess the reliability of onboard odometry over short and long trajectories.
- Test how speed and distance affected performance.
- Provide insights into feedback control and calibration strategies for error reduction.

### 5.2 Experiment Design

A total of 13 experiments were conducted, split into:

- 5 linear movement tests at different speeds and distances.
- 8 rotational movement tests at different speeds and angles.

Each experiment was carried out 20 times to ensure statistical significance and to allow observation of both deterministic and stochastic error components.

#### Linear Motion Experiments

Test ID	Speed (m/s)	Distance (m)
L1	0.2	1.0
L2	0.4	1.0
L3	0.2	2.0
L4	0.4	2.0
L5	0.6	2.0

Table 1. Linear motion test configurations

## Rotational Motion Experiments

Test ID	Speed (deg/s)	Target Angle
R1	45	45°
R2	75	45°
R3	45	90°
R4	75	90°
R5	45	180°
R6	75	180°
R7	45	360°
R8	75	360°

Table 2. Rotational motion test configurations

### 5.2.1 Experimental Procedure

The experiments were conducted in a controlled environment on a flat surface. Masking tape was used to make the start and end points of each trajectory, ensuring consistent measurements. The robot then was commanded to move at a specified speed for a calculated duration of time to cover the target distance or angle. The deviation of the final position from the expected position was measured and recorded in a CSV file. Note that for the linear movement tests, the robot center's x and y drift were directly recorded without any additional recordings for the angle deviation, whereas for the rotational movement tests, the x and y drift of two points of the robot (specifically the edge of the middle of the front and back panels) were recorded, and using these data the center of the robot's deviation as well as angle deviation were calculated.

insert diagram here showing how that is done

Speed (°/s)	Angle (°)	X Error (m)	Var	Y Error (m)	Var	Yaw Error (°) / Var
45	45	-0.3500	0.2525	-0.6500	0.3525	-7.1310 / 7.4743
45	90	-0.5750	0.5819	0.7750	0.3119	-4.8049 / 7.2139
45	180	0.5000	0.3000	0.3000	1.3600	-1.6012 / 9.1212
45	360	0.8500	0.1275	0.2000	0.1350	7.4315 / 12.4949
75	45	0.1000	0.1650	-0.6000	0.2900	-13.3710 / 33.7566
75	90	0.4750	0.7119	0.3500	0.4525	-7.3666 / 34.6317
75	180	1.2143	0.6565	0.7143	1.7755	-5.3584 / 32.1340
75	360	1.4500	0.3225	0.7250	1.2119	1.8853 / 34.6874

Table 3. Rotational motion statistics: Mean error and variance in position (m) and yaw (°)

Speed (m/s)	Distance (m)	dx Mean (cm)	dx Var	dy Mean (cm)	dy Var
0.2	1	-4.5500	0.2475	0.5000	1.4500
0.2	2	-9.0500	0.1475	-0.4500	2.9475
0.4	1	-4.9524	0.9025	0.8095	2.5351
0.4	2	-9.7000	0.8100	-1.4000	10.0400
0.6	2	-13.3043	3.0813	-20.8261	203.5350

Table 4. Linear motion statistics: Mean and variance of dx/dy errors (cm)

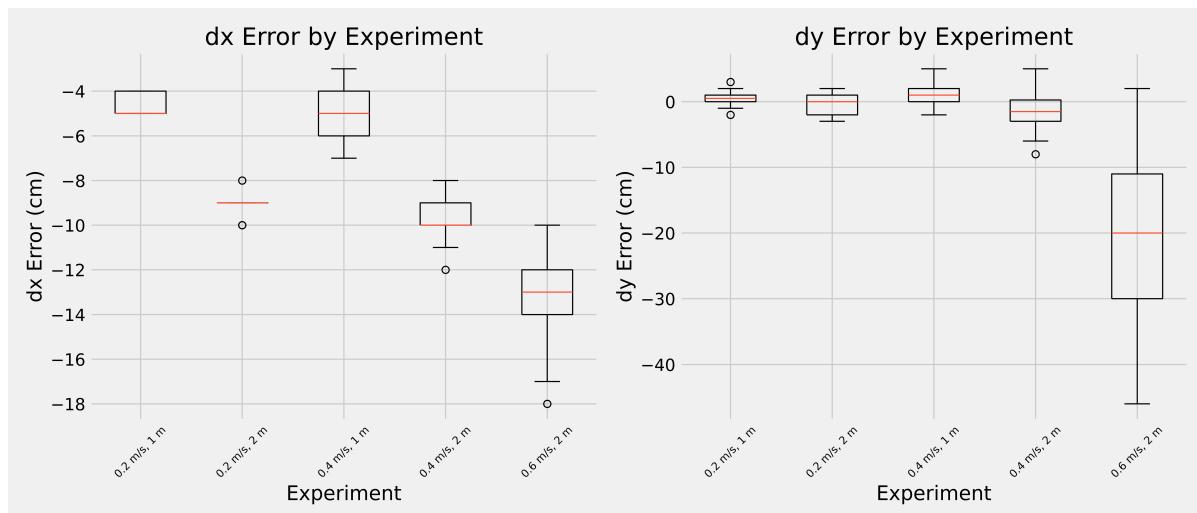


Figure 11. Centered image

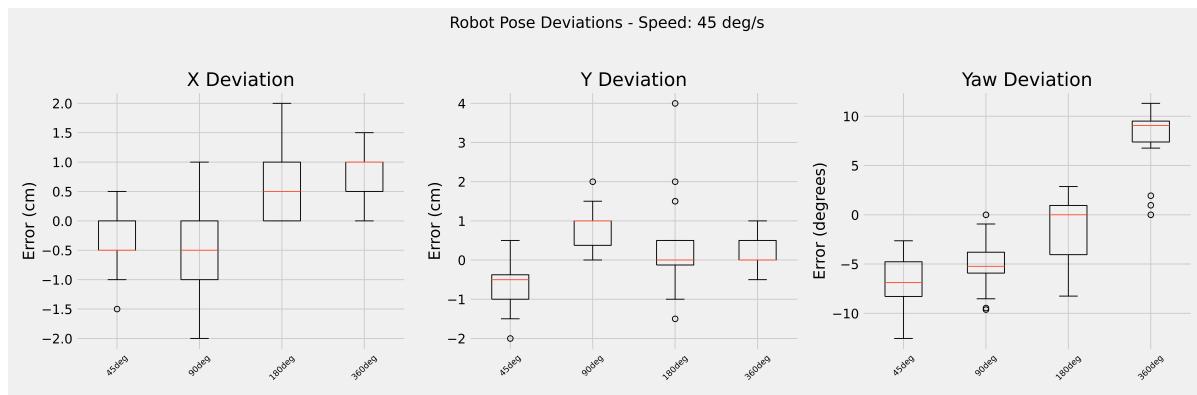


Figure 12. Centered image

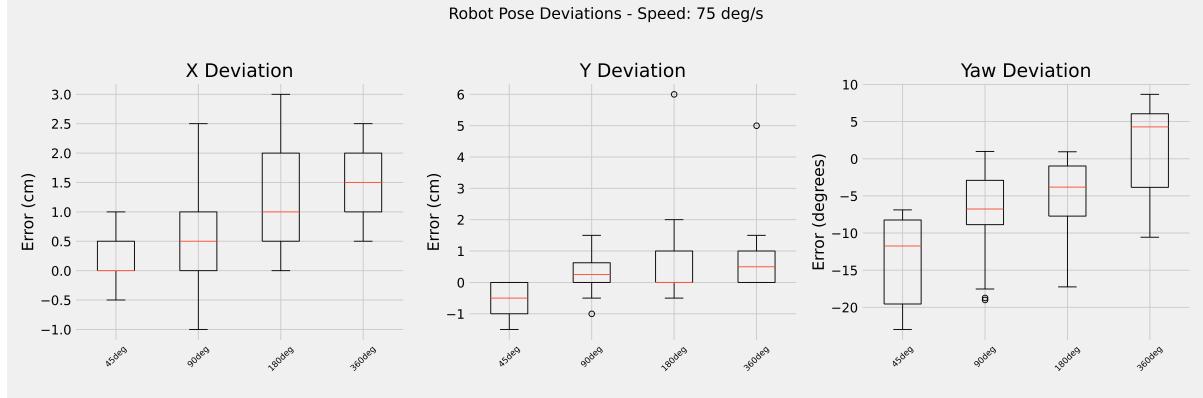


Figure 13. Centered image

### 5.3 Results and Error Analysis

#### 5.3.1 Linear Motion Error Characteristics

The linear motion experiments revealed a consistent underestimation in forward movement ( $dx$ ), with mean errors increasing approximately linearly with the commanded distance. For instance, at 0.2 m/s over 1 meter, the mean  $dx$  error was -4.55 cm, while at 2 meters it was -9.05 cm, indicating a scale-dependent and systematic error. This bias suggests a miscalibration in either velocity estimation or time-based control. In contrast, the lateral error ( $dy$ ) showed less consistency, with relatively low variance at slow speeds and significantly increased spread at higher velocities (e.g., variance of  $203.5 \text{ cm}^2$  at 0.6 m/s). This may indicate instability in lateral control, sensor drift, or non-ideal surface interactions.

#### 5.3.2 Rotational Motion Error Characteristics

Rotational experiments exhibited both systematic and random error components. At lower target angles ( $45^\circ$  and  $90^\circ$ ), yaw error was consistently negative across both speed conditions, pointing to under-rotation. This under-rotation was more severe at higher rotational speeds, suggesting an underestimation of angular displacement due to timing, inertia, or feedback delays. Notably, however, for the  $360^\circ$  trials, the yaw error became positive—indicating over-rotation. This suggests that the error model is nonlinear and possibly affected by controller saturation or feedback lag accumulating over time.

In addition to yaw deviation, positional drift in  $x$  and  $y$  was observed during rotation, with the magnitude generally increasing with both angle and speed. For example, at  $75^\circ/\text{s}$  over a  $360^\circ$  turn, the mean  $x$  and  $y$  drift exceeded 1.4 m and 0.72 m respectively. Such drift likely results from an imperfect center of rotation, actuator asymmetry, or encoder discrepancies.

#### 5.3.3 Classification of Errors

Based on the data, errors were classified as follows:

- **Systematic Errors:** Present in both  $dx$  and yaw measurements. These were repeatable and dependent on motion parameters, suggesting calibration issues or consistent model inaccuracies.

- **Random Errors:** Particularly visible in dy and yaw variance, especially at higher speeds. These may arise from environmental factors, surface inconsistencies, or sensor noise.
- **Scale-Dependent Errors:** Errors in dx and yaw tended to grow with increasing speed and commanded magnitude, indicating drift or temporal misalignment in control commands.
- **Nonlinear and Saturation Effects:** Reversal of yaw error direction (under-rotation to over-rotation) at large angles and high speeds suggests complex behavior beyond linear drift, potentially due to limits in the control loop or cumulative errors in open-loop motion.

These results underscore the need for either closed-loop feedback or more accurate modeling of motion and sensor characteristics to reduce the observed deviation, especially for longer or faster movements.

## 6 Future Applications

In this section we will discuss a potential future application of the KUKA YouBot, in the context of the T&R method of navigation. The T&R method is a form of visual SLAM, where the robot can be "taught" a path through a static environment using a camera. The robot then uses this information to enable it to repeat the path movement autonomously through key frames it has saved from the environment. This method is simple yet effective in its use cases and can be used in a variety of applications, such as industrial automation, home robotics, service, etc.

t&r is not the best implementation of the youbot

platform and real world application

why im a bit skeptical about trying to implement t&r in the context of assistive platform  
trying to present as an application as a platform that can later on be used to execute  
repetitive task based on the experience of a platform with

speculative : presenting it in terms of real-world applications

flexible intra-logistics human awareness and flexibility seamless human-robot existence

While the YouBot holds the potential capabilities for undertaking Teach and Repeat, its abilities as a mobile industrial robot base would be better suited for real-world applications within closed environments as an assistive platform.

This robot base would be most useful in an assisstie sense, where it assists humans in completing rather basic and repetitive tasks, like fetching beer.

The KUKA YouBot, with its omnidirectional mobile base, offers a flexible platform for experimentation and prototyping in robotics. While the Teach and Repeat (T&R) method—where a robot is “taught” a path using visual cues and then autonomously repeats it—has proven effective in certain domains, its real-world utility as a navigation strategy for assistive platforms is nuanced and context-dependent.

### 6.1 Potential Use Cases for the YouBot Mobile Base

The YouBot’s mobile base, independent of its manipulator arm, is particularly well-suited for:

- **Flexible Intra-Logistics:** The YouBot can transport materials, components, or finished goods within factories or laboratories, adapting to dynamic layouts and avoiding obstacles thanks to its omnidirectional drive system. This makes it valuable for automating repetitive transport tasks in manufacturing, electronics, and pharmaceutical environments .
- **Assistive Service Robotics:** In assistive roles, the mobile base could help with tasks such as fetching objects (e.g., drinks, tools), delivering supplies, or guiding people in structured indoor environments. Such applications are particularly relevant in healthcare, offices, or smart homes, where repetitive, low-complexity tasks can be offloaded from humans to robots .
- **Research and Prototyping Platform:** The YouBot is widely used in academic and industrial research for developing and testing navigation, mapping, and multi-

robot coordination algorithms. Its open interfaces and modular design make it ideal for experimentation in logistics, navigation, and human-robot interaction .

- **Quality Control and Inspection:** The platform can be equipped with sensors or cameras to autonomously inspect products, monitor environments, or perform routine checks in hazardous or hard-to-reach areas .

## 6.2 Teach and Repeat (T&R) in Context

The T&R method, while simple and robust for repeated path following in static environments, has limitations when applied to assistive platforms:

- **Limited Flexibility:** T&R excels in environments where the path and surroundings are relatively unchanging. In dynamic or human-populated spaces, its lack of real-time adaptability can be a drawback compared to more advanced SLAM or AI-based navigation systems.
- **Suitability for Repetitive Tasks:** For repetitive, well-defined routes—such as material delivery within a warehouse, or routine inspection rounds—T&R can be a practical, low-compute solution. However, its application as a general-purpose assistive platform is more speculative, especially where human interaction and environmental variability are significant.
- **Platform Capabilities:** The YouBot’s mobile base is robust and maneuverable, making it a strong candidate for T&R-based applications in controlled settings. Its open architecture allows easy integration of additional sensors or navigation modules, enabling researchers to extend beyond T&R as needed.

## 6.3 Speculative and Emerging Applications

Looking forward, the YouBot mobile base could play a role in:

- **Seamless Human-Robot Coexistence:** As part of smart environments, YouBots could support flexible logistics, on-demand delivery, and collaborative tasks alongside humans, leveraging both T&R for routine paths and more advanced navigation for dynamic tasks.
- **Education and Training:** Its accessibility and open-source support make it an excellent tool for teaching robotics concepts, prototyping new algorithms, or participating in competitions such as RoboCup@Work.
- **Translational Research:** Innovations and algorithms developed on the YouBot can be scaled up to larger, industrial-grade mobile platforms, facilitating technology transfer from the lab to real-world production lines.

## 6.4 Summary Table: Potential Use Cases for the KUKA YouBot Mobile Base

## 6.5 Conclusion

While the KUKA YouBot’s mobile base is not the optimal platform for all assistive applications—especially those requiring high flexibility and human awareness—it remains

<b>Application Area</b>	<b>Description</b>	<b>Reference</b>
Intra-logistics	Material transport, flexible routing in factories, labs, or warehouses	
Assistive service robotics	Fetching/delivery tasks, guidance, support in healthcare or home environments	
Research and prototyping	Testing navigation, SLAM, multi-robot systems, and human-robot interaction	
Inspection and quality control	Autonomous inspection, monitoring, and data collection in industrial or hazardous settings	
Education and training	Robotics teaching, student projects, and competitions	

Table 5. Potential Use Cases for the KUKA YouBot Mobile Base

a valuable tool for developing and demonstrating repetitive, structured tasks. Its use in T&R navigation is best suited for closed, static environments, but its modularity and open architecture allow for broader experimentation and real-world prototyping in logistics, research, and assistive robotics.

## 7 Reflection

[draft 1, 11.05 6pm](#)

In this section, I will reflect on the outcomes of this project. This will include an overview of project management practices and planning, alongside my learnings and personal feelings about the project.

### 7.1 Project Evolution

As discussed previously, the initial goal of this project was much more concrete and ambitious, with an ultimate aim of enabling Teach and Repeat on a decade-old robot whilst using something like ROS2 Jazzy. This was simply not feasible with the outdated software and hardware, lack of documentation, my own lack of experience, and the overall time and resource constraints for completing this project. Furthermore, this project was a significant different experience from any other course I have taken in the past.

My initial approach to project management was very linear and straightforward, with the understanding that there would be no hiccups or issues along the way. I had the following time-table in mind: [maybe insert a table showcasing the plan here?](#) While this was initially rewarding as I made progress in individual tasks (i.e. Kinect camera, booting up computer, static IP, etc.), momentum was quickly lost when it came to integrating these tasks into a cohesive system, through the use of the ROS1-ROS2 bridge.

### 7.2 AGILE

The new mindset I undertook was inspired by the AGILE project management methodology, which takes a much more flexible and iterative approach to project management. While the long-term goals are still important, the focus is on short-term goals and iterations. This allows for a more flexible approach, where the ending goal can be adjusted based on constraints, feedback, and progress.

While this also indirectly means that the project may not be concretely completed, it led to a more flexible exploration of the robot's capabilities and limitations. It furthermore relieved me of the pressure of having to complete a specific (and steep) goal, and gave me breathing space to play around with the available components more freely. This was much more rewarding and enjoyable.

Undertaking this mindset required time and patience, where I had to learn to accept that not everything would go according to plan. It furthermore required me to be more open to feedback, and actively focusing on short-term goals.

### 7.3 Final Thoughts

Overall, despite the various challenges faced, I am very happy with my progress and learning outcomes regarding this project. I was able to successfully revive the KUKA YouBot to a usable state, gain a deeper understanding of the ROS ecosystem, Linux, bash scripting, alongside the various hardware components of the robot. More importantly, I learned to manage projects with the understanding of personal and technical constraints. I'd like to thank my advisor for his provision of a different perspective on the project, explanations of everything and constant patience.

## References

- [1] I. Tsogias, “Kinematic Analysis of a KUKA YouBot”, 2016. doi: [10.26240/heal.ntua.12581](https://doi.org/10.26240/heal.ntua.12581). [Online]. Available: <https://dspace.lib.ntua.gr/xmlui/handle/123456789/43358>.
- [2] “YouBot Store — web.archive.org”, [Accessed 23-04-2025]. [Online]. Available: <https://web.archive.org/web/20170318163736/http://www.youbot-store.com/developers/>.
- [3] “YouBot Driver — janpaulus.github.io”, <https://janpaulus.github.io/>, [Accessed 23-04-2025].
- [4] “Youbot - Overview — github.com”, <https://github.com/youbot>, [Accessed 23-04-2025].

# A User Manual for the KUKA YouBot

## A.1 Booting Up the YouBot

To begin operating the YouBot, follow these steps to power up the system and access the onboard computer interface using a monitor and peripherals.

### A.1.1 Powering On

1. Plug the YouBot into a power source using the provided power cable and adapter through the top panel. Ensure that the supply voltage is compatible (24V DC).
2. Press the main power button located on the top panel of the YouBot. This will power the system on. Note that the onboard computer and motors are not powered on by default.
3. Connect a monitor using the provided VGA port. Note that this is required to be plugged in before powering on the YouBot, as the onboard computer will not boot up with a GUI otherwise.
4. Turn the onboard computer and motors on. Long press the power button to cycle through options for powering the subsystems. Toggle by releasing the button when the desired option is highlighted.
5. Wait for the onboard computer to boot up. This may take a few minutes.
6. Plug in USB peripherals such as a keyboard and mouse to interact with the onboard computer.
7. Once the computer has booted, you should see a desktop environment similar to a standard Linux distribution. You can now interact with the onboard computer using the keyboard and mouse. Note that the default credentials are:
  - Username: `youbot`
  - Password: `youbot`

[add image of the booting up process.](#)

## A.2 Initial Configuration

After booting up the YouBot, some initial configuration is required to enable the ROS interface and the YouBot drivers. This includes setting up the ROS networking configuration, configuring the Ethernet interface, and editing the YouBot driver configuration file.

### A.2.1 ROS Networking Configuration (`.bashrc`)

Update the onboard computer's `.bashrc` file with the following:

```
export MY_IP=localhost

export ROS_IPV6=off
export ROS_HOSTNAME=$MY_IP
export ROS_MASTER_URI=http://$MY_IP:11311
export ROS_IP=$MY_IP

export ROS_PACKAGE_PATH=$ROS_PACKAGE_PATH:/home/youbot/youbot_driver:/home/
youbot/ros_stacks:/home/youbot/applications
```

```
export LIBGL_ALWAYS_SOFTWARE=1  
source /opt/ros/hydro/setup.bash
```

To verify configuration:

```
$ roscore
```

### A.2.2 Ethernet Configuration (`/etc/network/interfaces`)

To enable stable communication between the YouBot and external systems, a static IP address is preferably assigned to the onboard Ethernet interface. This enables reliable wired access for remote control.

**Note:** Not all Linux distributions name Ethernet interfaces as `eth0`, and instead may use interfaces named `eth1`, `enp2s0`, etc. To identify the correct interface, use the following command:

```
$ ip link show
```

Look for an interface name associated with a physical Ethernet port. In the following instructions, replace `eth0` with the appropriate interface name.

Assign a permanent static ethernet IP by editing the file `/etc/network/interfaces` and adding:

```
auto eth0  
iface eth0 inet static  
    address 192.168.10.1 ## The static IP address to be assigned  
    netmask 255.255.255.0 ## Standard subnet mask
```

Replace `eth0` with your actual interface name as determined above. Save the file and apply changes:

```
$ sudo /etc/init.d/networking restart
```

Confirm the static IP assignment by checking the interface configuration:

```
$ ip addr show eth0
```

**Note:** An alternative to an Ethernet configuration is to assign a static IP via the network router on a wireless interface. This eliminates a wired connection dependency and allows the YouBot to obtain a static IP automatically when connected to the same network. Refer to your router's documentation for specific instructions on conducting DHCP reservations.

**Testing the Connection** After configuration, connect another device (e.g., a laptop) to the YouBot via Ethernet. Assign the other device a static IP in the same subnet (e.g., 192.168.10.2). Then test connectivity:

```
$ ping 192.168.10.1 ## From the laptop to the YouBot
```

For remote terminal access:

```
$ ssh youbot@192.168.10.1
```

Enter the password when prompted (default is `youbot`). If the connection is successful, the YouBot should be accessible through an external PC.

### A.2.3 Youbot Driver Configuration (`~/youbot_driver/config/youbot-ethercat.cfg`)

The YouBot driver requires the correct Ethernet interface to be specified for EtherCAT communication with the base and arm motors. This is configured in the file `~/youbot_driver/config/youbot-ethercat.cfg`. Note that the interface name used here may be different from the Ethernet interface name used in the previous step. Type the following to see your Ethernet interfaces:

```
$ ifconfig
```

Change the Ethernet interface name in the youbot configuration file (`~/youbot_driver/config/youbot-ethercat.cfg`) to match your actual interface name:

```
#EtherCAT port  
[EtherCAT]  
EthernetDevice = eth1 # Change this to your actual EtherCAT interface name
```

This will enable the YouBot driver to communicate with the motors and sensors through the correct port for the C++ demos. Run and test either the C++ demos or the ROS interface to verify that the configuration is correct.

## A.3 Running C++ demos

**Note:** Remember to turn the motors on before running the demos. This can be done by long-pressing the power button on the top panel of the YouBot and toggling the "Motors" option to ON.

The YouBot provides precompiled C++ demo applications located in `~/applications`. These are also available from the official `youbot_applications` GitHub repository. The demos include basic tests for motor communication and manual control interfaces.

### A.3.1 Hello World Demo

This demo verifies that the EtherCAT communication is working correctly by issuing movement commands to the robot.

To run it:

```
$ cd ~/applications/hello_world_demo/bin  
$ sudo ./youBot_HelloWorldDemo
```

If successful, the output will indicate that the application is connected to the motors, and the robot should briefly move in the four cardinal directions (forward, backward, left, and right), confirming functional motor control.

### A.3.2 Keyboard Control Demo

This demo enables basic manual control of the YouBot using the keyboard. It allows testing of real-time responsiveness and manual teleoperation.

Run it with:

```
$ cd ~/applications/keyboard_control_demo/bin  
$ sudo ./youBot_KeyboardControlDemo
```

Use the on-screen instructions to control the robot's movement via the keyboard.

One may run the other demos in a similar manner. Refer to the GitHub repository's README for more details.

## A.4 Running the ROS Interface

Once the C++ demos have been confirmed functional, the ROS (Robot Operating System) interface can be used to enable modular software integration for motion planning, visualization, diagnostics, and teleoperation.

### A.4.1 Verifying Installed ROS Packages

To verify the required packages are installed on the YouBot, run:

```
$ rospack list
```

Ensure the following packages are present:

- `youbot_driver_ros_interface` – Core ROS hardware interface for the YouBot.
- `youbot_teleop` – ROS node for keyboard-based teleoperation.
- `youbot_common` – Common message definitions and configuration files.
- `youbot_description` – URDF robot model and related assets.

### A.4.2 Launching the ROS Driver

Before launching the ROS interface, ensure the correct environment variables are set (see section: *ROS Networking Configuration*). Then launch the ROS master and the YouBot driver:

```
$ roscore  
$ roslaunch youbot_driver_ros_interface youbot_driver.launch
```

The driver initializes the EtherCAT interface and exposes the robot's hardware components to the ROS environment.

### A.4.3 Inspecting Nodes and Topics

Use the following commands to inspect active ROS nodes and topics:

```
$ rosnode list  
$ rostopic list
```

Example nodes:

- `/youbot_driver` – Node that manages all hardware-level communication.
- `/rosout` – Default ROS logging node.

Example topics:

- `/joint_states` – Publishes joint positions and velocities.
- `/cmd_vel` – Accepts velocity commands for the base.
- `/tf` – Publishes coordinate frame transforms.

#### A.4.4 Using Visualization Tools: `rqt` and `rviz`

ROS visualization tools are used to monitor system behavior and robot state:

- `rqt_graph` – Displays real-time node and topic communication graph.
- `rviz` – Visualizes robot model, coordinate frames, sensor data, and state feedback.

Run the following commands in separate terminals:

```
$ rosrun rqt_graph rqt_graph
$ rosrun rviz rviz
```

## A.5 Writing Custom Programs

This section describes how to create and run custom ROS programs to control the YouBot using Python. The provided ROS demo packages serve as a reference.

### A.5.1 Creating a Catkin Workspace

Before writing custom ROS programs, create a Catkin workspace to manage packages and dependencies. Note that we have named our folder `DSD` to reflect the course name.

```
$ mkdir -p ~/DSD/catkin_ws/src
$ cd ~/DSD/catkin_ws/
$ catkin_make
```

Source the workspace to update your ROS environment:

```
$ source devel/setup.bash
```

To source automatically in every new terminal, add this line to your `.bashrc`:

```
echo "source ~/DSD/catkin_ws/devel/setup.bash" >> ~/.bashrc
```

### A.5.2 Creating a Custom Package

Create a new ROS package named `youbot_control` with dependencies:

```
$ cd ~/DSD/catkin_ws/src
$ catkin_create_pkg youbot_control rospy std_msgs geometry_msgs #
    youbot_control is the package name, the following are dependencies
$ cd ~/DSD/catkin_ws
$ catkin_make
```

### A.5.3 Writing a Python Control Script

Inside your package directory, create a `scripts` folder and a Python control script:

```
$ cd ~/DSD/catkin_ws/src/youbot_control  
$ mkdir scripts  
$ touch scripts/simple_move.py  
$ chmod +x scripts/simple_move.py # Make the script executable
```

Sample code files can be found in [appendix for code](#)

To run a script:

```
$ rosrun youbot_control simple_move.py
```

**Note:** Note that certain scripts require additional arguments to be passed in. Refer to the comments for details.

### A.5.4 Automation with Bash Scripts and Tmux

Manually opening multiple terminals and running ROS nodes is tedious. This process can be automated using a combination of bash scripts and `tmux`.

First, install `tmux` if not already available:

```
$ sudo apt-get install tmux
```

Then, create a bash script to launch the environment in multiple panes:

```
$ touch launch_youbot.sh  
$ chmod +x launch_youbot.sh
```

Sample content for `launch_youbot.sh` can be found in [appendix for code](#). This script will create a new `tmux` session with three panes: one for `roscore`, one for the YouBot driver, and one for a custom movement script. Run the script by navigating to its directory and running the command:

```
$ ./launch_youbot.sh
```

Note that a password will be required to initialize the YouBot-ROS interface. Navigate between panes using `Ctrl+b` followed by the arrow keys. Detach from the session with `Ctrl+b d` and reattach later with:

```
$ tmux attach-session -t youbot
```

Refer to the `tmux` documentation for more advanced usage and commands.

### A.5.5 Using TMuLE for Configuration Management

One may use TMuLE to simplify the scripting process further using toml files. The youbot did not allow for the installation of TMuLE due to no support for Python 2.7, so this was not used in this project. However, it is a useful tool to consider for future projects. Refer to the documentation here.

## B Code files

### B.0.1 rotate\_graph.py

This script read the data collected from the rotational movement experiments to parse the data and plot the drift of the centre of the robot in x and y axes as well as difference in yaw in a graph format. It also prints out the mean and standard deviation of the relevant errors. Refer to [insert something here idr](#) for further details.

```
import pandas as pd
import numpy as np
import matplotlib.pyplot as plt
import os
from glob import glob

# === Config toggles ===
PRINT_COLUMN_DATA = False
PRINT_STATS = True
SAVE FIG = True
SHOW FIG = False

CSV_DIR = 'code/csv/' # Adjust as needed
DATA_DIR = 'code/images/'

plt.style.use('fivethirtyeight')
# plt.rcParams["font.family"] = "Times New Roman"

def compute_pose_errors_and_print(df, rotation_deg, speed):
    theta = np.radians(rotation_deg)
    expected_left = np.array([30 * np.cos(theta), 30 * np.sin(theta)])
    expected_right = np.array([-30 * np.cos(theta), -30 * np.sin(theta)])
    expected_center = (expected_left + expected_right) / 2
    expected_yaw = theta % (2 * np.pi)

    x_errors, y_errors, yaw_errors = [], [], []

    if PRINT_COLUMN_DATA:
        print(f"\nResults for {speed} deg/s, {rotation_deg} deg:")
        print(f"{'Row':<5} {'Center_X':>10} {'Center_Y':>10} {'Yaw_deg':>10} "
              f"{'dx_odom':>8} {'dy_odom':>8} {'dyaw_odom_deg':>14}")

    for idx, row in df.iterrows():
        actual_left = expected_left + np.array([row['dx1_measured'], row[''
                           'dy1_measured']])
        actual_right = expected_right + np.array([row['dx2_measured'], row[''
                           'dy2_measured']])
        center = (actual_left + actual_right) / 2

        vector_left_to_right = actual_left - actual_right
        yaw_rad = np.arctan2(vector_left_to_right[1], vector_left_to_right[0])
        yaw_diff = (yaw_rad - expected_yaw + np.pi) % (2 * np.pi) - np.pi
```

```

x_err = center[0] - expected_center[0]
y_err = center[1] - expected_center[1]

x_errors.append(x_err)
y_errors.append(y_err)
yaw_errors.append(yaw_diff)

if PRINT_COLUMN_DATA:
    print(f"{{idx:<5} {{center[0]:10.3f} {{center[1]:10.3f} {{np.degrees(yaw_rad
        ):10.2f} "
        f"{{row['dx_odom']:8.3f} {{row['dy_odom']:8.3f} {{np.degrees(row['
            dyaw_odom']):14.2f}}")}

if PRINT_STATS:
    mean_yaw_deg = np.degrees(np.mean(yaw_errors))
    var_yaw_deg = np.var(np.degrees(yaw_errors))
    print(f"\nStatistics for {speed} deg/s, {rotation_deg} deg:")
    print(f" Mean X Error: {np.mean(x_errors):.4f}, Variance: {np.var(x_errors)
        :.4f}")
    print(f" Mean Y Error: {np.mean(y_errors):.4f}, Variance: {np.var(y_errors)
        :.4f}")
    print(f" Mean Yaw Error (deg): {mean_yaw_deg:.4f}, Variance (deg sq): {(
        var_yaw_deg:.4f})")

return np.array(x_errors), np.array(y_errors), np.array(yaw_errors)

def plot_rotational_errors_by_speed():
    file_list = sorted(glob(os.path.join(CSV_DIR, 'rotate_*.csv')))

    grouped_data = {}

    for file_path in file_list:
        filename = os.path.splitext(os.path.basename(file_path))[0]
        try:
            _, speed_str, deg_str = filename.split('_')
            speed = int(speed_str)
            rotation_deg = int(deg_str)
        except ValueError:
            print(f"Skipping invalid filename format: {filename}")
            continue

        df = pd.read_csv(file_path)
        x_err, y_err, yaw_err = compute_pose_errors_and_print(df, rotation_deg,
            speed)

        grouped_data.setdefault(speed, []).append((rotation_deg, x_err, y_err, np.
            degrees(yaw_err)))

for speed in sorted(grouped_data.keys()):
    group = sorted(grouped_data[speed], key=lambda x: x[0])

```

```

x_err_all = [item[1] for item in group]
y_err_all = [item[2] for item in group]
yaw_err_all = [item[3] for item in group]
labels = [f"{item[0]}deg" for item in group]

fig, axes = plt.subplots(1, 3, figsize=(18, 6))

axes[0].boxplot(x_err_all, labels=labels)
axes[0].set_title('X Deviation')
axes[0].set_ylabel('Error (cm)')
axes[0].tick_params(axis='x', rotation=45, labelsize=9)

axes[1].boxplot(y_err_all, labels=labels)
axes[1].set_title('Y Deviation')
axes[1].set_ylabel('Error (cm)')
axes[1].tick_params(axis='x', rotation=45, labelsize=9)

axes[2].boxplot(yaw_err_all, labels=labels)
axes[2].set_title('Yaw Deviation')
axes[2].set_ylabel('Error (degrees)')
axes[2].tick_params(axis='x', rotation=45, labelsize=9)

plt.suptitle(f'Robot Pose Deviations - Speed: {speed:.0f} deg/s')
plt.tight_layout(rect=[0, 0.03, 1, 0.95])

if SAVE FIG:
    if not os.path.exists(DATA_DIR):
        os.makedirs(DATA_DIR)
    filename = f'rotational_errors_speed_{int(speed):02d}.png'
    plt.savefig(os.path.join(DATA_DIR, filename), dpi=600)

if SHOW FIG:
    plt.show()
else:
    plt.close()

if __name__ == "__main__":
    plot_rotational_errors_by_speed()

```

### B.0.2 linear\_graph.py

This script read the data collected from the linear movement experiments to parse the data and plot the drift of the centre of the robot in x and y axes in a graph format. It also prints out the mean and standard deviation of the relevant errors. Refer to [insert something here idr](#) for further details.

```
import pandas as pd
import numpy as np
import matplotlib.pyplot as plt
import os
from glob import glob

# === Config toggles ===
PRINT_COLUMN_DATA = False
PRINT_STATS = True
SAVE FIG = True
SHOW FIG = False

CSV_DIR = 'code/csv/' # Adjust as needed
DATA_DIR = 'code/images/'

plt.style.use('fivethirtyeight')
# plt.rcParams["font.family"] = "Times New Roman"

def print_column_data(label, dx_meas, dy_meas, dx_odom, dy_odom):
    print(f"\nResults for {label}:")
    print(f'{Row}:<5} {dx_meas:>10} {dy_meas:>10} {dx_odom:>10} {dy_odom:>10}')
    for i in range(len(dx_meas)):
        print(f'{i}<5} {dx_meas[i]:10.3f} {dy_meas[i]:10.3f} {dx_odom[i]:10.3f} {dy_odom[i]:10.3f}')

def print_stats(label, errors_dict):
    print(f"\nStatistics for {label}:")
    for key, errors in errors_dict.items():
        mean = np.mean(errors)
        median = np.median(errors)
        var = np.var(errors)
        print(f' {key} -> Mean: {mean:.4f}, Median: {median:.4f}, Variance: {var:.4f}')

def plot_linear_errors():
    file_list = sorted(glob(os.path.join(CSV_DIR, 'linear_*.csv')))

    dx_errors_by_exp = []
    dy_errors_by_exp = []
    labels = []

    for file_path in file_list:
        df = pd.read_csv(file_path)
```

```

data = list(df.itertuples(index=False, name=None))

dx_meas = np.array([t[0] for t in data])
dy_meas = np.array([t[1] for t in data])
dx_odom = np.array([t[2] for t in data])
dy_odom = np.array([t[3] for t in data])

error_dx = dx_odom - dx_meas
error_dy = dy_odom - dy_meas

dx_errors_by_exp.append(error_dx)
dy_errors_by_exp.append(error_dy)

filename = os.path.splitext(os.path.basename(file_path))[0]
parts = filename.split('_')
speed = float(parts[1]) / 10
distance = int(parts[2])
label = f"{speed:.1f} m/s, {distance} m"
labels.append(label)

if PRINT_COLUMN_DATA:
    print_column_data(label, dx_meas, dy_meas, dx_odom, dy_odom)

if PRINT_STATS:
    print_stats(label, {'dx_error': error_dx, 'dy_error': error_dy})

fig, axes = plt.subplots(1, 2, figsize=(14, 6))

axes[0].boxplot(dx_errors_by_exp, labels=labels)
axes[0].set_title('dx Error by Experiment')
axes[0].set_xlabel('Experiment')
axes[0].set_ylabel('dx Error (cm)')
axes[0].grid(True)
axes[0].tick_params(axis='x', rotation=45, labelsize=9)

axes[1].boxplot(dy_errors_by_exp, labels=labels)
axes[1].set_title('dy Error by Experiment')
axes[1].set_xlabel('Experiment')
axes[1].set_ylabel('dy Error (cm)')
axes[1].grid(True)
axes[1].tick_params(axis='x', rotation=45, labelsize=9)

plt.tight_layout()

if SAVE FIG:
    save_path = os.path.join(DATA_DIR, 'linear_error_boxplots.png')
    plt.savefig(save_path, dpi=600)
if SHOW FIG:
    plt.show()

```

```
if __name__ == "__main__":
    plot_linear_errors()
```

### B.0.3 linear\_test.py

This script is used to undertake the linear movement experiments. It uses the ROS interface to send velocity commands to the YouBot, and then calculates the delta in odometry from the robot. The script is designed to be run multiple times with different parameters through the terminal to collect data for analysis. Refer to [insert something here idr](#) for further details.

```
#!/usr/bin/env python

import rospy
from geometry_msgs.msg import Twist
from nav_msgs.msg import Odometry
import sys

import time, math, tf
rospy.init_node('rotate_test', anonymous=True)
def move_fwd(speed, distance):

    #Publisher to /cmd_vel
    pub = rospy.Publisher('/cmd_vel', Twist, queue_size=10)

    #Create a Twist message for movement
    move_cmd = Twist()
    move_cmd.linear.x = float(speed) # m/s

    #Calculate time needed
    move_time = float(distance) / float(speed)

    #Set a rate to publish messages

    start_time = time.time()

    while time.time() - start_time < move_time and not rospy.is_shutdown():
        pub.publish(move_cmd)

    #After specified distance, stop robot
    move_cmd.linear.x = 0
    pub.publish(move_cmd)

    rospy.loginfo("Moved forward " + str(int(100 * distance)) + " cm.")
    rospy.loginfo("%.2f", move_time)

def get_yaw_from_quaternion(ori_q):
    qu = (
        ori_q.x,
        ori_q.y,
        ori_q.z,
        ori_q.w
    )
```

```

_, _, yaw = tf.transformations.euler_from_quaternion(qu)
return yaw

def odom_get():
    try:
        rospy.sleep(0.2)
        odom_msg = rospy.wait_for_message('/odom', Odometry, timeout=5)
        position = odom_msg.pose.pose.position
        orientation = odom_msg.pose.pose.orientation
        yaw = get_yaw_from_quaternion(orientation)

        return (position.x, position.y, position.z, yaw)
    except rospy.ROSException:
        rospy.logwarn("Timeout while waiting for odom msg.")

def odom_delta_print(start, end):
    dx = end[0] - start[0]
    dy = end[1] - start[1]
    dz = end[2] - start[2]
    dyaw = end[3] - start[3]

    dyaw = (dyaw + math.pi) % (2 * math.pi) - math.pi
    rospy.loginfo('Odometry Change:')
    rospy.loginfo(' dx = %.3f m:', dx)
    rospy.loginfo(' dy = %.3f m:', dy)
    rospy.loginfo(' dz = %.3f m:', dz)
    rospy.loginfo(' dyaw = %.3f rad (%.1f deg):', dyaw, math.degrees(dyaw))

if __name__ == '__main__':
    try:
        start = odom_get()
        if start is None:
            rospy.loginfo("Failed to get initial position.")
        move_fwd(float(sys.argv[1]), float(sys.argv[2]))
        end = odom_get()
        if end is None:
            rospy.loginfo("Failed to get final position.")

        odom_delta_print(start,end)
    except rospy.ROSInterruptException:
        pass

```

#### B.0.4 rotate\_test.py

This script is used to undertake the linear movement experiments. It uses the ROS interface to send velocity commands to the YouBot, and then calculates the delta in odometry from the robot. The script is designed to be run multiple times with different parameters through the terminal to collect data for analysis. Refer to [insert something here idr](#) for further details.

```
#!/usr/bin/env python

import rospy
from geometry_msgs.msg import Twist
from nav_msgs.msg import Odometry
import sys

import time, math, tf
rospy.init_node('rotate_test', anonymous=True)

def turn_left(speed, distance):
    # speed and distance are in degrees here.

    #Publisher to /cmd_vel
    pub = rospy.Publisher('/cmd_vel', Twist, queue_size=10)

    #Create a Twist message for movement
    move_cmd = Twist()
    move_cmd.angular.z = float(speed) * math.pi / 180# rad/s

    #Set distance and calculate time needed
    move_time = float(distance) / float(speed)

    #Set a rate to publish messages

    start_time = time.time()

    while time.time() - start_time < move_time and not rospy.is_shutdown():
        pub.publish(move_cmd)

    #After specific distance, stop robot
    move_cmd.angular.z = 0
    pub.publish(move_cmd)

    rospy.loginfo("Turned %.2f degrees.", distance)

def get_yaw_from_quaternion(ori_q):
    qu = (
        ori_q.x,
        ori_q.y,
        ori_q.z,
        ori_q.w
    )
```

```

_, _, yaw = tf.transformations.euler_from_quaternion(qu)
return yaw

def odom_get():
    try:
        rospy.sleep(2.0)
        odom_msg = rospy.wait_for_message('/odom', Odometry, timeout=5)
        position = odom_msg.pose.pose.position
        orientation = odom_msg.pose.pose.orientation
        yaw = get_yaw_from_quaternion(orientation)

        return (position.x, position.y, position.z, yaw)
    except rospy.ROSException:
        rospy.logwarn("Timeout while waiting for odom msg.")

def odom_delta_print(start, end):
    dx = end[0] - start[0]
    dy = end[1] - start[1]
    dz = end[2] - start[2]
    dyaw = end[3] - start[3]

    dyaw = (dyaw + math.pi) % (2 * math.pi) - math.pi
    rospy.loginfo('Odometry Change:')
    rospy.loginfo(' dx = %.3f m:', dx)
    rospy.loginfo(' dy = %.3f m:', dy)
    rospy.loginfo(' dz = %.3f m:', dz)
    rospy.loginfo(' dyaw = %.3f rad (%.1f deg):', dyaw, math.degrees(dyaw))

if __name__ == '__main__':
    try:
        start = odom_get()
        if start is None:
            rospy.loginfo("Failed to get initial position.")
        turn_left(float(sys.argv[1]), float(sys.argv[2]))
        end = odom_get()
        if end is None:
            rospy.loginfo("Failed to get final position.")

        odom_delta_print(start, end)
    except rospy.ROSInterruptException:
        pass

```

### B.0.5 simple\_square\_movement.py

This script was used to test the YouBot's ability to move in a square pattern. It uses the ROS interface to send velocity commands to the YouBot.

```
#!/usr/bin/env python

import rospy
from geometry_msgs.msg import Twist

import time, math
rospy.init_node('simple_square_movement', anonymous=True)
def move_fwd():

#Publisher to /cmd_vel
pub = rospy.Publisher('/cmd_vel', Twist, queue_size=10)

#create a Twist message for movement
move_cmd = Twist()
move_cmd.linear.x = 0.2 # Move at 0.1 m/s

#Set distance and calculate time needed
distance = 1
speed = move_cmd.linear.x
move_time = distance / speed

#Set a rate to publish messages

start_time = time.time()

while time.time() - start_time < move_time and not rospy.is_shutdown():
    pub.publish(move_cmd)

#After 10 cm, stop robot
move_cmd.linear.x = 0
pub.publish(move_cmd)

rospy.loginfo("Moved forward 10cm.")
rospy.sleep(2)

def turn_right():

#Publisher to /cmd_vel
pub = rospy.Publisher('/cmd_vel', Twist, queue_size=10)

#create a Twist message for movement
move_cmd = Twist()
move_cmd.angular.z = -math.pi/5 # Move at 0.1 m/s
rospy.loginfo(math.pi)
```

```

#Set distance and calculate time needed
distance = math.pi*89 / 180
speed = move_cmd.angular.z
move_time = -distance / speed

#Set a rate to publish messages

start_time = time.time()

while time.time() - start_time < move_time and not rospy.is_shutdown():
    pub.publish(move_cmd)

#After 10 cm, stop robot
move_cmd.angular.z = 0
pub.publish(move_cmd)

rospy.loginfo("Turned 90 degrees clockwise.")
rospy.sleep(2)

if __name__ == '__main__':
    try:
        move_fwd()
        turn_right()
        move_fwd()
        turn_right()
        move_fwd()
        turn_right()
        move_fwd()
        turn_right()
    except rospy.ROSInterruptException:
        pass

```

### B.0.6 Tmux automation script

This script is used to automate the process of launching the ROS interface and the custom control scripts in a tmux session. It creates a new tmux session with four panes: one running the YouBot-ROS interface, one running the keyboard controller node, and two free panes for miscellaneous purposes.

```
#!/bin/bash

# Create a new tmux session named 'quadrants', in detached mode
tmux new-session -d -s quadrants

# Split the window into two vertical panes (left and right)
tmux split-window -h

# Split the left pane into two horizontal panes (top-left and bottom-left)
tmux split-window -v -t quadrants:0.0

# Split the right pane into two horizontal panes (top-right and bottom-right)
tmux split-window -v -t quadrants:0.1

# Start youbot-ROS interface in the top-left pane (quadrants:0.0)
tmux send-keys -t quadrants:0.0 "sudo bash -c 'source /opt/ros/hydro/setup.bash &&
    roslaunch youbot_driver_ros_interface youbot_driver.launch'
" C-m

# Start the keyboard control interface in the bottom-left pane (quadrants:0.2)
tmux send-keys -t quadrants:0.2 "rosrun youbot_control keyboard.py" C-m

# Send 'echo 3' to the top-right pane (quadrants:0.1)
tmux send-keys -t quadrants:0.1 "echo 3" C-m

# Send 'echo 4' to the bottom-right pane (quadrants:0.3)
tmux send-keys -t quadrants:0.3 "echo 4" C-m

# Attach to the tmux session so you can see the result
tmux attach-session -t
```

## C Experimental Data

### C.1 Linear movement experiment

#### C.1.1 Linear movement, 0.2m/s, 1m

dx_meas	dy_meas	dx_odom	dy_odom	dz_odom	dyaw_odom
100	-4	96	-1	0	-0.012
103	-2	98	-2	0	-0.012
102	-1	98	-3	0	0.003
99	0	95	-1	0	-0.006
102	-2	98	0	0	-0.013
100	-1	95	0	0	-0.001
102	-1	98	0	0	0.005
103	-2	98	0	0	0.005
104	-1	99	-1	0	0.006
102	-2	97	0	0	-0.004
103	0	98	0	0	-0.010
104	-1	99	-1	0	0.003
102	-1	98	-1	0	0.004
102	0	97	0	0	0.002
100	0	96	-1	0	0.012
103	-1	98	0	0	0.007
103	-1	98	0	0	0.003
100	-1	96	0	0	0.004
100	-1	96	0	0	-0.003
103	0	98	-1	0	0.008

#### C.1.2 Linear movement, 0.2m/s, 2m

dx_meas	dy_meas	dx_odom	dy_odom	dz_odom	dyaw_odom
207	2	198	-1	0	0.012
204	0	195	0	0	0.002
207	0	199	0	0	-0.014
205	-1	196	0	0	0.001
206	0	197	0	0	0.003
207	0	198	0	0	-0.006
208	-2	199	0	0	0.000
208	-2	198	0	0	0.008
208	2	199	0	0	-0.001
208	1	199	0	0	0.009
205	2	196	0	0	0.004
209	2	200	0	0	0.007
205	1	196	0	0	0.000
206	2	197	0	0	0.014
208	-1	199	0	0	0.000
209	-2	199	0	0	-0.013
207	2	198	-1	0	0.012
207	-2	198	0	0	-0.008
207	0	198	0	0	0.004
205	3	196	0	0	0.002

### C.1.3 Linear movement, 0.4m/s, 1m

dx_meas	dy_meas	dx_odom	dy_odom	dz_odom	dyaw_odom
94	3	88	2	0	0.021
99	-2	94	3	0	-0.005
101	0	95	2	0	0.002
93	1	88	2	0	0.015
100	0	94	2	0	0.019
100	1	94	3	0	0.005
100	0	97	3	0	-0.007
99	0	94	2	0	0.012
102	2	98	2	0	0.018
101	1	96	2	0	0.020
102	3	97	2	0	0.011
97	2	90	3	0	0.013
95	2	90	0	0	0.008
94	2	90	0	0	0.007
103	0	97	0	0	0.004
97	-1	92	0	0	0.002
99	-1	95	0	0	-0.003
96	0	91	0	0	-0.006
100	-1	96	0	0	0.012
101	-1	97	0	0	-0.005
94	0	90	0	0	-0.006

### C.1.4 Linear movement, 0.4m/s, 2m

dx_meas	dy_meas	dx_odom	dy_odom	dz_odom	dyaw_odom
204	3	194	-1	0	0.022
205	3	194	-2	0	-0.010
206	8	196	0	0	0.006
202	5	192	-1	0	0.012
205	-2	195	-1	0	0.012
206	3	197	2	0	0.004
199	2	190	2	0	0.012
198	3	190	2	0	0.000
200	0	190	2	0	-0.002
205	5	196	2	0	0.009
200	6	190	3	0	0.005
206	4	196	2	0	0.020
205	3	196	4	0	0.015
198	6	190	3	0	0.008
207	3	197	2	0	0.024
207	3	197	2	0	0.021
205	5	195	3	0	0.004
207	-2	198	3	0	-0.009
207	4	195	2	0	0.013
206	-1	196	4	0	0.004

### C.1.5 Linear movement, 0.6m/s, 2m

dx_meas	dy_meas	dx_odom	dy_odom	dz_odom	dyaw_odom
197	0	187	-4	0	0.003
193	1	179	-7	0	0.006
203	5	190	-10	0	0.002
200	5	188	-15	0	0.005
202	3	189	-20	0	0.003
201	0	188	-23	0	0.003
194	0	180	-25	0	0.004
192	4	178	-30	0	0.003
198	2	186	3	0	-0.001
193	-2	181	0	0	0.007
201	0	189	-3	0	-0.003
193	-2	181	-8	0	-0.002
204	2	191	-13	0	-0.007
201	0	188	-14	0	-0.002
202	1	189	-17	0	0.006
203	0	190	-18	0	-0.001
192	-1	180	-21	0	0.003
192	2	180	-24	0	-0.002
193	5	180	-29	0	0.003
195	7	180	-34	0	0.004
200	5	184	-38	0	-0.001
204	3	186	-43	0	0.006
201	1	184	-45	0	-0.002

## C.2 Rotational movement experiment

### C.2.1 Rotational movement, 45deg/s, 45deg

dx1_meas	dy1_meas	dx2_meas	dy2_meas	dx_odom	dy_odom	dz_odom	dyaw_odom
1	-3	-2	1	0	0	0	0.683
1	-3	-2	1	0	0	0	0.667
2	-4	-2	4	0	0	0	0.596
2	-6	-5	5	0	0	0	0.554
2	-4	-3	3	0	0	0	0.648
0	-3	-1	2	0	0	0	0.711
0	-2	-2	2	0	0	0	0.726
0	-3	-2	1	0	0	0	0.708
2	-4	-3	3	0	0	0	0.633
2	-3	-2	2	0	0	0	0.656
1	-5	-3	1	0	0	0	0.665
1	-4	-2	1	0	-1	0	0.690
3	-7	-4	4	0	0	0	0.553
2	-3	-2	3	0	0	0	0.663
2	0	-1	1	0	0	0	0.714
2	-4	-2	2	0	0	0	0.674
3	-6	-2	5	0	0	0	0.559
3	-4	-3	4	0	0	0	0.549
2	-4	-2	3	0	0	0	0.665
2	-4	-2	2	0	0	0	0.666

### C.2.2 Rotational movement, 45deg/s, 90deg

dx1_meas	dy1_meas	dx2_meas	dy2_meas	dx_odom	dy_odom	dz_odom	dyaw_odom
3	0	-3	0	0	0	0	1.407
2	0	-2	0	1	0	0	1.439
0	1	-1	0	0	0	0	1.476
3	0	-4	1	0	0	0	1.411
1	0	-1	0	0	1	0	1.479
-1	0	-1	0	0	0	0	1.482
0	1	-4	1	0	0	0	1.460
0	1	0	1	0	0	0	1.487
1	1	-5	1	0	0	0	1.421
1	1	-5	1	0	0	0	1.423
3	0	-3	0	0	0	0	1.464
1	2	-3	1	0	0	0	1.475
4	1	-5	1	0	0	0	1.403
1	1	-3	1	0	0	0	1.474
3	2	-3	2	0	0	0	1.418
2	1	-3	1	0	0	0	1.458
4	1	-6	1	0	0	0	1.368
3	2	-4	1	0	0	0	1.438
6	0	-4	1	-1	0	0	1.363
2	1	-2	1	0	1	0	1.469

### C.2.3 Rotational movement, 45deg/s, 180deg

dx1_meas	dy1_meas	dx2_meas	dy2_meas	dx_odom	dy_odom	dz_odom	dyaw_odom
1	1	1	2	-1	0	0	3.042
1	1	1	-1	-1	1	0	2.994
0	1	0	2	-1	0	0	3.020
1	2	1	2	-1	1	0	3.041
0	-1	0	0	0	0	0	3.060
0	1	0	-3	-1	0	0	2.967
0	2	0	-3	0	1	0	2.949
0	0	1	1	0	0	0	3.047
1	4	3	-5	0	1	0	2.918
0	2	1	-2	0	1	0	2.996
1	-3	1	0	1	1	0	3.302
0	0	0	0	0	0	0	3.022
0	0	0	0	0	0	0	3.040
0	0	1	1	1	0	0	3.047
0	3	0	-3	1	0	0	2.980
1	3	1	-3	1	0	0	2.955
1	0	0	0	1	0	0	3.041
1	4	1	4	0	0	0	2.909
0	0	0	0	0	0	0	3.026
0	3	0	-3	0	0	0	2.934

#### C.2.4 Rotational movement, 45deg/s, 360deg

dx1_meas	dy1_meas	dx2_meas	dy2_meas	dx_odom	dy_odom	dz_odom	dyaw_odom
2	5	1	-4	0	0	0	-0.120
1	4	1	-4	0	-1	0	-0.133
1	5	1	-5	0	-1	0	-0.092
1	6	1	-5	0	-1	0	-0.093
0	5	1	-5	0	0	0	-0.055
1	6	1	-6	0	0	0	-0.086
0	0	0	0	0	-1	0	-0.213
0	5	2	-5	-1	0	0	-0.092
1	5	1	-5	-1	0	0	-0.103
0	2	1	0	1	-1	0	-0.196
1	1	2	0	-1	0	0	-0.195
0	4	1	-4	-1	0	0	-0.101
0	4	1	-3	-1	0	0	-0.133
1	5	1	-5	-1	0	0	-0.093
1	5	1	-5	-1	0	0	-0.089
1	1	1	1	-1	0	0	-0.220
1	5	1	-5	-1	0	0	-0.101
0	5	1	-6	0	-1	0	-0.044
1	4	1	-4	0	-1	0	-0.013
0	5	1	-4	0	-1	0	-0.111

#### C.2.5 Rotational movement, 75deg/s, 45deg

dx1_meas	dy1_meas	dx2_meas	dy2_meas	dx_odom	dy_odom	dz_odom	dyaw_odom
3	-5	-3	3	0	0	0	0.630
6	-10	-6	10	0	0	0	0.370
4	-6	-4	5	0	0	0	0.551
7	-10	-5	8	0	0	0	0.422
5	-10	-6	10	0	0	0	0.416
5	-6	-4	6	0	0	0	0.589
7	-11	-6	9	0	0	0	0.422
4	-7	-3	4	0	0	0	0.546
3	-3	-2	3	0	0	0	0.642
5	-9	-5	8	0	0	0	0.443
3	-5	-4	4	0	0	0	0.590
6	-10	-6	9	0	0	0	0.393
3	-7	-3	5	0	0	0	0.556
3	-5	-2	3	0	0	0	0.609
3	-5	-2	2	0	0	0	0.623
2	-4	-3	3	0	0	0	0.594
3	-6	-4	3	-1	0	0	0.585
2	-3	-2	3	0	0	0	0.650
2	-3	-2	3	-1	0	0	0.623
2	-3	-2	3	-1	0	0	0.658

### C.2.6 Rotational movement, 75deg/s, 90deg

dx1_meas	dy1_meas	dx2_meas	dy2_meas	dx_odom	dy_odom	dz_odom	dyaw_odom
4	0	-6	0	0	0	0	1.346
11	2	-10	1	0	-1	0	1.205
1	0	-2	0	0	-1	0	1.437
-1	-2	0	0	0	-1	0	1.460
0	-1	0	1	0	-1	0	1.445
0	6	1	-5	0	-1	0	1.341
4	-1	-3	0	-1	-1	0	1.415
2	0	-2	0	0	-1	0	1.464
3	1	-3	1	0	0	0	1.426
4	1	-4	1	0	-1	0	1.394
10	1	-10	2	0	0	0	1.243
4	0	-2	1	-1	-1	0	1.422
3	0	0	0	0	-1	0	1.477
5	-1	-3	1	1	0	0	1.386
5	0	-4	0	0	-1	0	1.377
7	1	-8	2	1	0	0	1.287
10	-1	-8	2	0	-1	0	1.211
3	0	0	1	1	-1	0	1.463
5	0	-2	1	0	-1	0	1.432
7	-1	-2	0	0	-1	0	1.358

### C.2.7 Rotational movement, 75deg/s, 180deg

dx1_meas	dy1_meas	dx2_meas	dy2_meas	dx_odom	dy_odom	dz_odom	dyaw_odom
1	8	3	-8	1	0	0	2.769
0	1	0	-1	0	0	0	2.991
0	1	0	-1	0	0	0	2.999
1	0	1	0	1	-1	0	3.005
0	1	0	1	0	-1	0	3.001
0	1	1	1	0	-1	0	2.988
0	0	1	1	0	-1	0	3.028
1	2	1	-2	-1	0	0	2.972
1	3	1	-3	-1	0	0	2.950
3	7	3	-7	-1	0	0	2.810
2	10	3	-7	-1	0	0	2.753
1	1	1	-1	0	1	0	2.951
1	4	1	-2	0	1	0	2.959
1	1	0	0	1	1	0	2.997
3	7	0	5	1	0	0	2.825
1	7	3	-7	-1	0	0	2.794
1	2	1	-2	-1	0	0	2.967
2	2	2	2	-1	1	0	3.030
2	5	1	-3	-1	1	0	2.926
2	2	1	-3	0	1	0	2.961
3	10	1	-8	1	1	0	2.771

### C.2.8 Rotational movement, 75deg/s, 360deg

dx1_meas	dy1_meas	dx2_meas	dy2_meas	dx_odom	dy_odom	dz_odom	dyaw_odom
1	-5	2	6	1	0	0	-0.394
1	3	1	-2	1	0	0	-0.167
0	3	1	0	1	1	0	-0.203
1	3	3	7	1	0	0	-0.370
1	5	2	-2	1	-1	0	-0.136
0	5	1	-3	1	-1	0	-0.122
1	-1	1	3	1	-1	0	-0.305
1	4	2	-4	0	-1	0	0.141
1	-2	1	4	0	-1	0	-0.321
2	2	2	-2	-1	1	0	-0.191
1	2	2	0	0	-1	0	-0.213
1	2	1	-2	-1	-1	0	-0.184
2	3	3	-2	-1	-1	0	-0.184
1	-4	1	4	-1	0	0	-0.351
2	3	2	-3	-1	0	0	-0.164
2	3	3	-3	-1	0	0	-0.177
1	-4	1	4	-1	1	0	-0.358
2	4	2	-4	-1	1	0	-0.132
1	5	2	-4	-1	1	0	-0.121
1	3	2	-2	-1	1	0	-0.170